

# vtech®

# User's Manual

## Light-Up Learning Phone™



© 2009 VTECH  
Printed in China

91-002352-010-000 (美)

 
Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

**Preschool Learning™** features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,



Julia Fitzgerald  
Vice President, Marketing  
VTech Electronics, NA


To learn more about the **Preschool Learning™** series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

 Thank you for purchasing the **VTech® Light-Up Learning Phone™**.

The **VTech® Light-Up Learning Phone™** features a removable handset, fun recording feature and real phone sound effects. It teaches numbers and basic number concepts through fun games. It also introduces ten familiar professions and their characteristics through phone call role-play. You can even call back to the base unit from the handset!

The **VTech® Light-Up Learning Phone™** can also help your child learn an important phone number through repetition! Use the number setting feature to program in a personal number, along with a corresponding face graphic and voice message for your child.

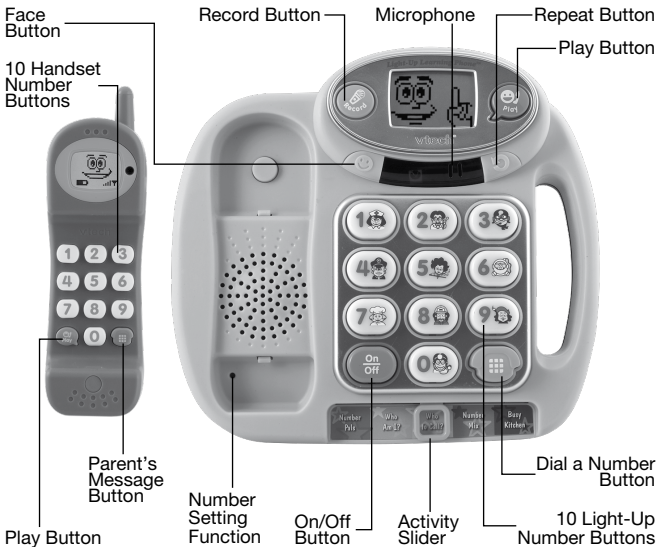


# INCLUDED IN THIS PACKAGE

- One VTech® Light-Up Learning Phone™
- One handset
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

**Note:** Please keep the user's manual as it contains important information.

Unlock the packaging locks:

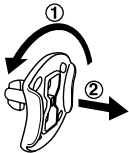

- ① Rotate the packaging locks counter-clockwise 90 degrees
- ② Pull out the packaging locks


## GETTING STARTED

### POWER SOURCE

The VTech® Light-Up Learning Phone™ operates on 3 “AA” size batteries (AM-3/LR6) and 1 “CR2032” size battery.

### BATTERY INSTALLATION FOR MAIN PHONE


1. Make sure the unit is off.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new “AA” (AM-3/LR6) batteries into the compartment as illustrated. (The use of new, alkaline batteries is recommended for maximum performance.)

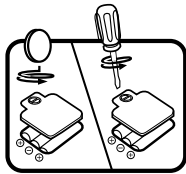

4. Replace the battery cover and tighten the screw to secure the battery cover.

## BATTERY INSTALLATION FOR HANDSET

1. Locate the battery cover on the top of the handset.
2. Use a small cross-head screwdriver to loosen the battery cover.
3. Install a new “CR2032” size battery as illustrated.
4. Close the battery cover and tighten the screw to secure.

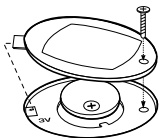

**Note: All recorded messages will be erased once the battery is replaced.**

## BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

**WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

## NOTICE TO PARENTS

The demo connecting tag should be removed automatically when the product is taken out of the packaging. If the demo tag is still in position when you begin play, please remove it from the unit to activate normal play mode.

# PRODUCT FEATURES

## MAIN PHONE UNIT

### ON/OFF BUTTON



1. To begin play, press the **On/Off** button.
2. Choose an activity by sliding the activity slider to one of the five activities.
3. Press the **On/Off** button again to turn the unit off.

### RECORD BUTTON



Press the **Record** button to record your message.

### PLAY BUTTON



Press the **Play** button to play your recorded message.

### FACE BUTTON



Press the **Face** button to choose your face. There are six faces to choose from. After 3 seconds of no input, the displayed face will be selected.

### REPEAT BUTTON



Press the **Repeat** button while playing a game to hear the question again or get a clue to the answer.

## CHARACTER / NUMBER BUTTONS

Press these buttons to answer questions during the different modes of play. The characters on each button are:

Number 1: Nurse

Number 2: Scientist

Number 3: Pilot

- Number 4: Policeman
- Number 5: Musician
- Number 6: Astronaut
- Number 7: Chef
- Number 8: Firefighter
- Number 9: Artist
- Number 0: Doctor

## NUMBER SETTING FUNCTION

Use this button to program in a phone number and to record a message. Use a sharp object to press into the hole. You will be asked to press the **Face** button to choose a picture. Choose from Dad, Mom, Grandpa, Grandma or home. After a few seconds of no input, the displayed face will be selected.

You will then be asked to input a 10 digit phone number and to record your message after the tone.

You can hear the recorded message by pressing the **Parent's Message** button on the handset or the **Dial a Number** button on the main phone.

### DIAL A NUMBER BUTTON



Press this button to hear the programmed number and play back the recorded message.

## HANDSET

Press any button on the handset in any mode to hear responses from the related character. For best performance, make sure the handset faces the main phone unit as you use it.

### NUMBER BUTTONS **8**

Press the 10 number buttons to trigger the corresponding character on the main phone. You will hear a response for each profession.

## PLAY BUTTON



This button has the same function as pressing the **Play** button on the main phone unit. Press this to hear your recorded message.

## PARENT'S MESSAGE BUTTON




Press this button to play back your recorded message.

If there is no recorded message, you will hear the phrase “There is nobody on the phone.”

## AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Light-Up Learning Phone™** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **On/Off** button.


When the low battery indicator  appears on the screen, the unit will automatically turn off. Please replace the batteries as soon as possible.

## NOTE ABOUT HANDSET TRANSMISSION TO MAIN PHONE UNIT

The infrared sensor works within 3 inches and 30 degrees of distance.

Please play in an area free of infrared disturbance.

Please avoid playing under direct sunlight since this can also affect the signal.

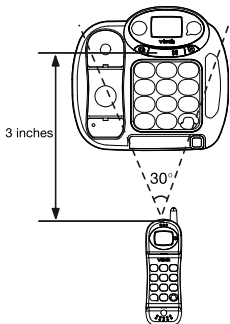



# ACTIVITIES

## Activity 1: Number Pals

Press the number buttons once to hear all corresponding numbers and professions, along with fun sound effects and phrases.

## Activity 2: Who Am I?

Guess who's talking! You will hear clues about a character. If you answer incorrectly, you will hear another clue. There are 4 chances to answer each question.

## Activity 3: Who to Call?

Watch the animation and decide who to call for help. There are 3 chances to answer every question.

## Activity 4: Number Mix

In this activity, you will be asked different questions for different groups of numbers that appear on the screen. There are 2 chances to answer each question.

## Activity 5: Busy Kitchen

The chef is cooking pancakes in the kitchen. A sequence of numbers will appear on the screen. Type them as quickly as you can before time is up. If you do not finish in time, or type a wrong number, the pancakes will burn! Answer 5 questions correctly and a fun rewarding animation will play.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit onto a hard surface and do not expose the unit to moisture or water.

## TROUBLESHOOTING

1. If your **VTech® Light-Up Learning Phone™** stops working or does not turn on:
  - Check your batteries. Make sure the batteries are fresh and properly installed.
  - If you are still having problems, visit our website at [www.vtechkids.com](http://www.vtechkids.com) for troubleshooting tips.
2. If, when pressing the **On/Off** button, nothing happens:
  - Check to see that the batteries are aligned correctly.

## TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual error message or problem you are experiencing.
- The actions you took right before the error message or problem occurred.

**Internet:** [www.vtechkids.com](http://www.vtechkids.com)

**Phone:** 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

## OTHER INFO

**VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

**COMPANY :** **VTech®** Electronics North America, L.L.C.

**ADDRESS :** 1155 W. Dundee Road, Suite 130, Arlington Heights, IL 60004, USA

**TEL NO.:** 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IMPORTANT NOTE:**

Creating and developing **VTech® Preschool Learning™** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.