

vtech[®]

User's Manual

Dress & Discover Friend™



© 2012 VTech
Printed in China
91-002703-003 (US) (CA)

Dear Parent,

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

*To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com*

INTRODUCTION

Thank you for purchasing the **VTech® Dress & Discover Friend™** learning toy!

The **Dress & Discover Friend™** by **VTech®** is an adorable and interactive dress-up monkey that comes with eight interchangeable articles of clothing that are perfectly sized for little hands. As your child pops each piece onto the monkey, it is recognized and the monkey responds with fun phrases that teach colors, feelings, daily life activities, and weather. For added fun, there is a heart-shaped light-up button that plays fun sounds and music!

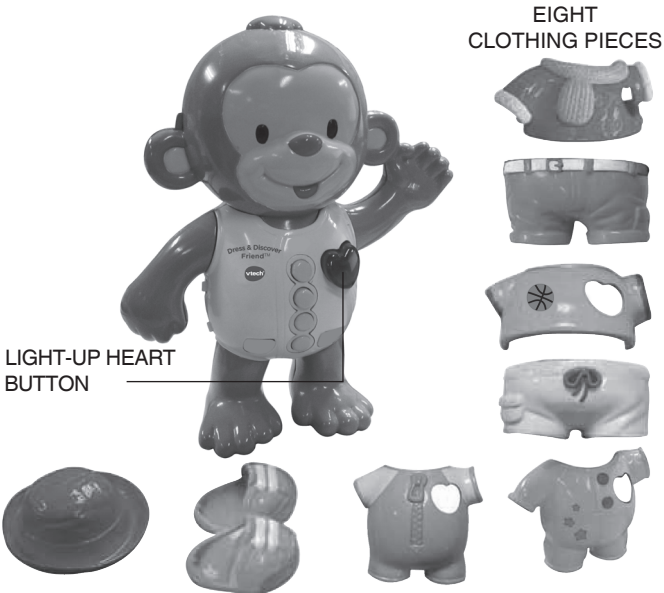

LIGHT-UP HEART
BUTTON

EIGHT
CLOTHING PIECES

INCLUDED IN THIS PACKAGE

- One VTech® Dress & Discover Friend™ learning toy
- One instruction manual
- Eight clothing pieces



WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

GETTING STARTED


BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the monkey. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

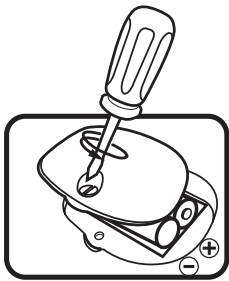

BATTERY NOTICE

 - Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

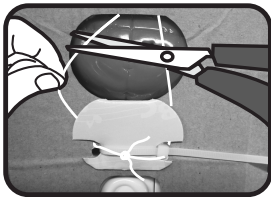

The cord is not part of this toy. Please remove the cord and discard before assembly for your child's safety.

PRODUCT FEATURES

1. ON/OFF SWITCH

The **ON/OFF SWITCH** is located on the back of the monkey. To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON (⏻)** position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF (●)** position.



2. EIGHT PIECES OF CLOTHING AND ACCESSORIES

 
 
Dress the monkey in his clothes to hear fun phrases, sounds, sing-along songs and melodies.

3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Dress & Discover Friend™** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing and holding the heart button for approximately a second, or by putting on the clothes. Putting on the hat or shoes will not wake up the unit.

ACTIVITIES

1. Slide the **On/Off Switch** to turn the unit on. You will hear a playful sing-along song, fun sounds and a phrase. The light will flash with the sounds.
2. Press the **Light-Up Heart Button** before dressing the monkey to hear questions, song and melodies. The light will flash with the sounds.
3. Put on different **Clothes** to hear special sing-along songs and phrases specific to each item of clothing. Press the light-up heart button when the monkey is dressed to hear sounds and melodies. The light will flash with the sounds.
4. When the monkey is dressed in a complete outfit, press the **Light-Up Heart Button** to hear fun songs and phrases. If the monkey's outfit is incomplete, he will ask for a specific item of clothing. The items of clothing correspond to activities the monkey wants to do. The light will flash with the sounds.

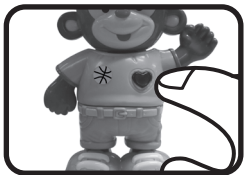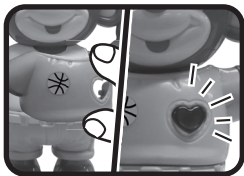

MELODY LIST:

1. Beautiful Dreamer
2. Row, Row, Row Your Boat
3. Skip to My Lou
4. Pease Porridge Hot
5. Teddy Bear Picnic
6. Little Brown Jug
7. Three Little Kittens
8. Polly Put the Kettle On
9. Bill Bailey, Won't You Please Come Home?
10. Chopsticks
11. Happy Farmer
12. Animal Fair
13. Yankee Doodle

SUNG-SONG LYRICS

SONG 1

Summer, fall, winter, spring.
Let's dress up for everything!

SONG 2

Pajamas, pajamas. Great, now I am dressed!

SONG 3

Swimming suit, swimming suit. Great, now I am dressed!

SONG 4

T-shirt, T-shirt. Great, now I am dressed!

SONG 5

Shorts, shorts. Great, now I am dressed!

SONG 6

Coat, coat. Great, now I am dressed!

SONG 7

Jeans, jeans. Great, now I am dressed!

SONG 8

T-shirt, shorts. Great, now I am dressed!

SONG 9

Coat, jeans. Great, now I am dressed!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.

3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CLASS 1
LED PRODUCT**