




User's Manual

Hoop Madness Basketball™



INTRODUCTION

The **Hoop Madness Basketball™** set can be adjusted from 2.8 to 3.9 feet and offers 3 different activities to grow with your child. Go solo or grab some friends to practice important skills. It's a slam dunk!

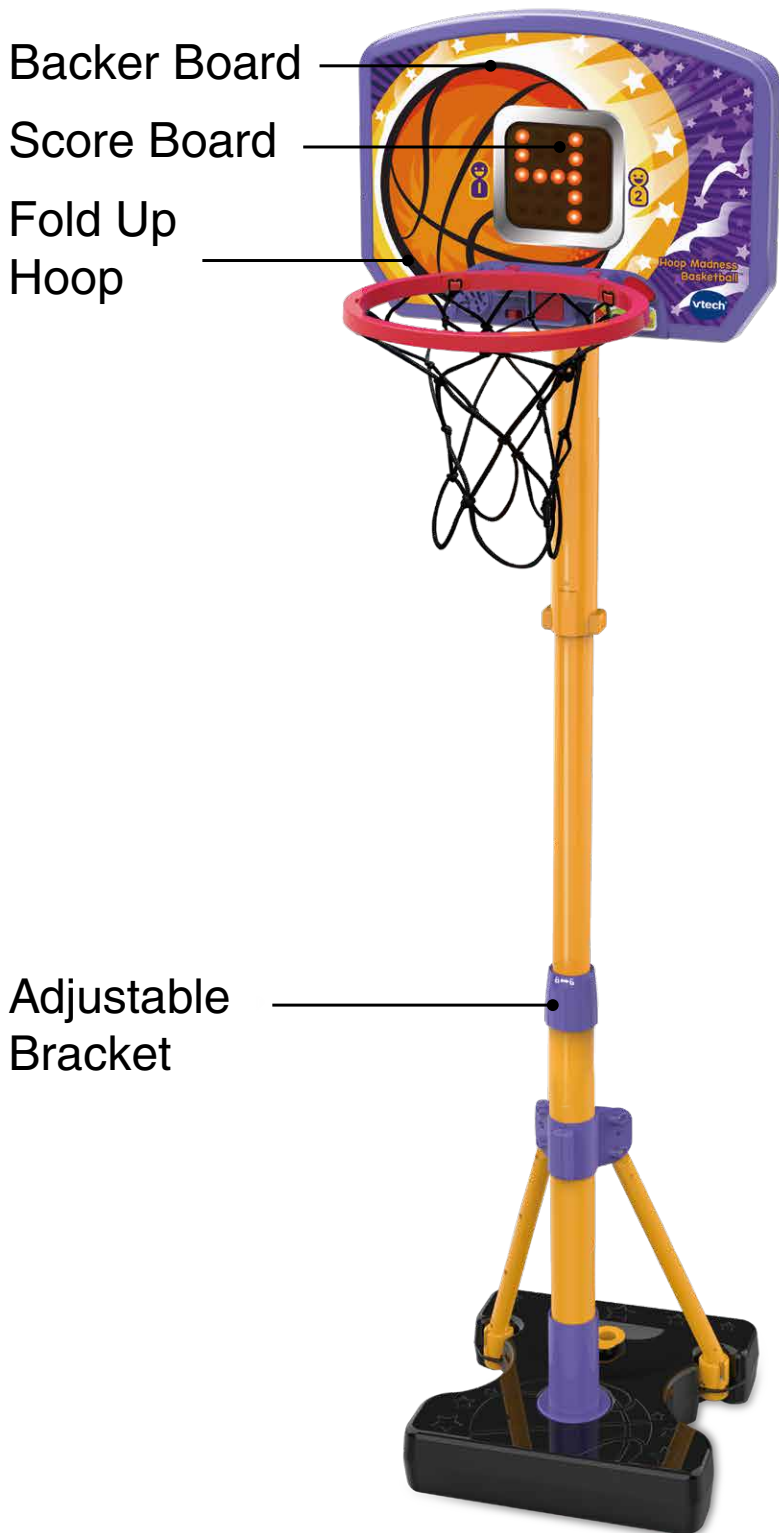

Mute/Volume Selector

OFF/Mode Selector

Select Button



YOU WILL NEED



OR



INCLUDED IN THIS PACKAGE

A



11

B



3




3



1



1

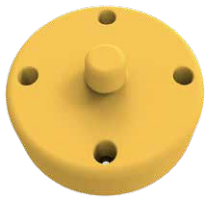


1



2



2

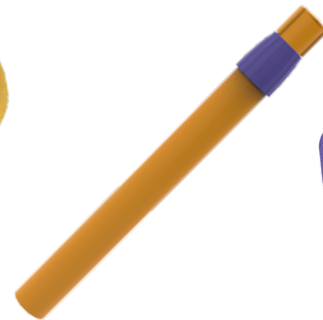

1



1



1



1



1



1

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

⚠ **CAUTION:**

This package contains small screws. Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.


⚠ **ATTENTION :**

Ce jouet contient des petites vis. Il doit être assemblé par un adulte. Pour la sécurité de votre enfant, ne pas le laisser jouer avec tant qu'il n'est pas complètement assemblé par un adulte.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

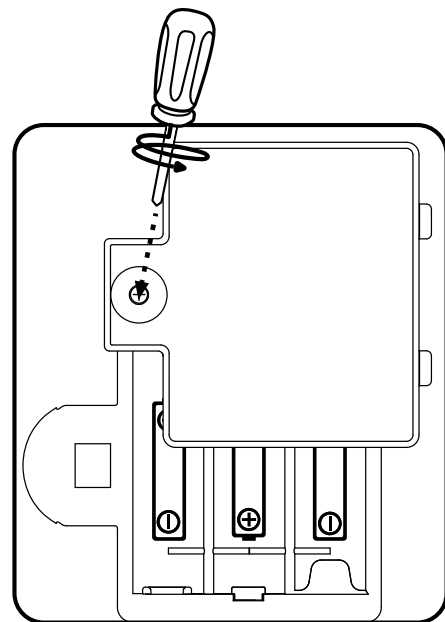

4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

 **WARNING:**

Adult assembly required for battery installation.

Keep batteries out of reach of children.

 **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.



RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


ASSEMBLY INSTRUCTIONS



With the **Hoop Madness Basketball™** set, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.

NOTE: To prevent the **Hoop Madness Basketball** set from falling over and causing injury, the base must be filled fully with sand or water. **DO NOT** let your child play with this toy until the base has been fully filled.

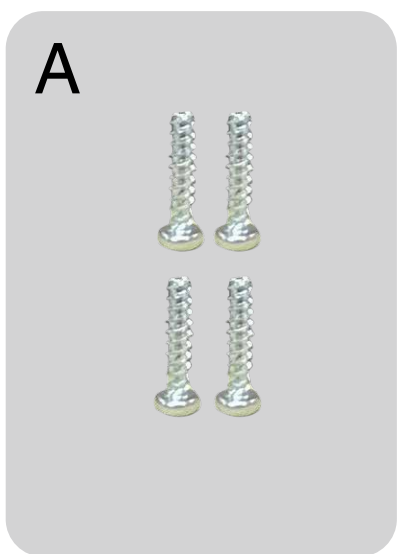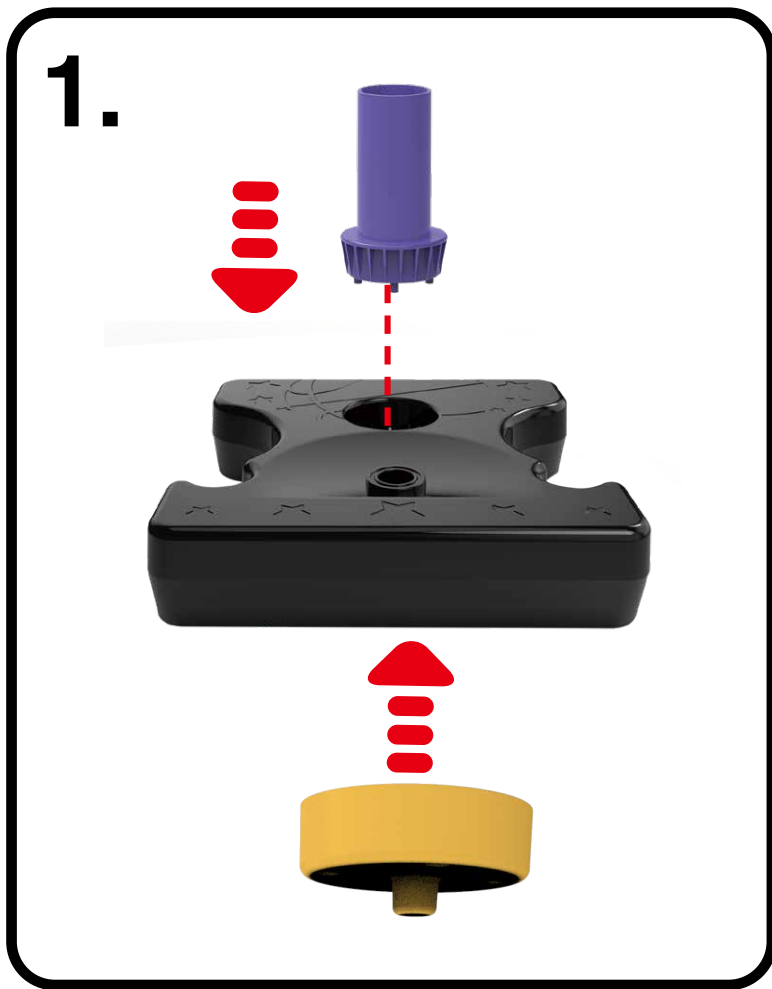





x 4

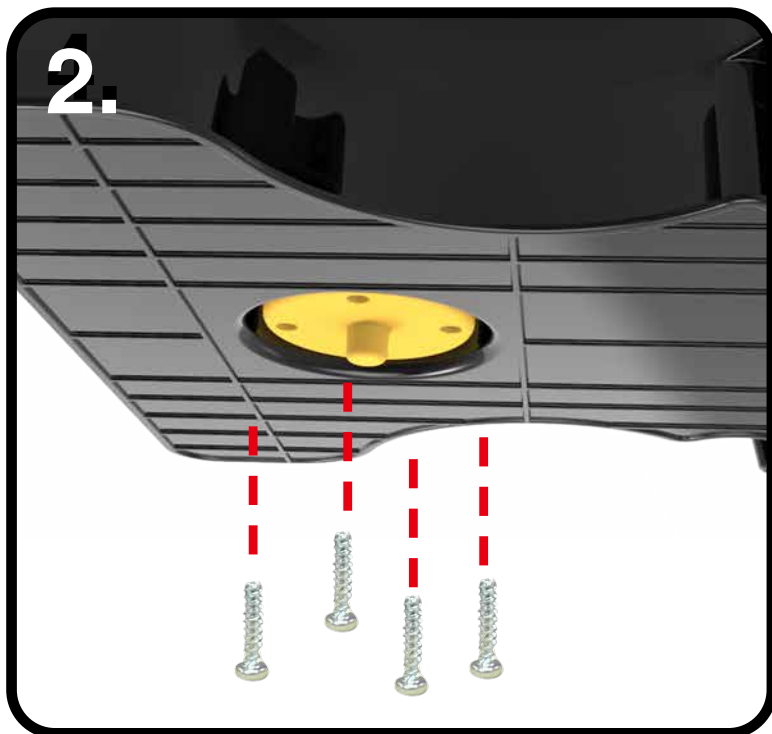

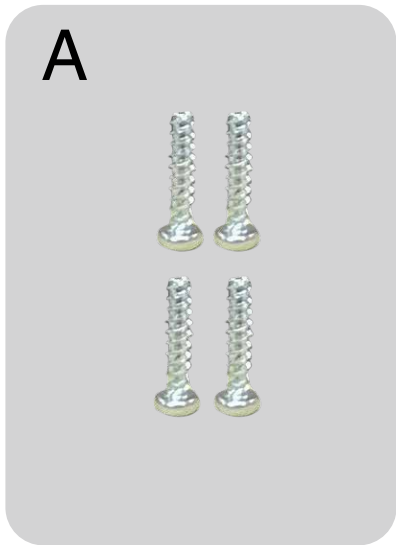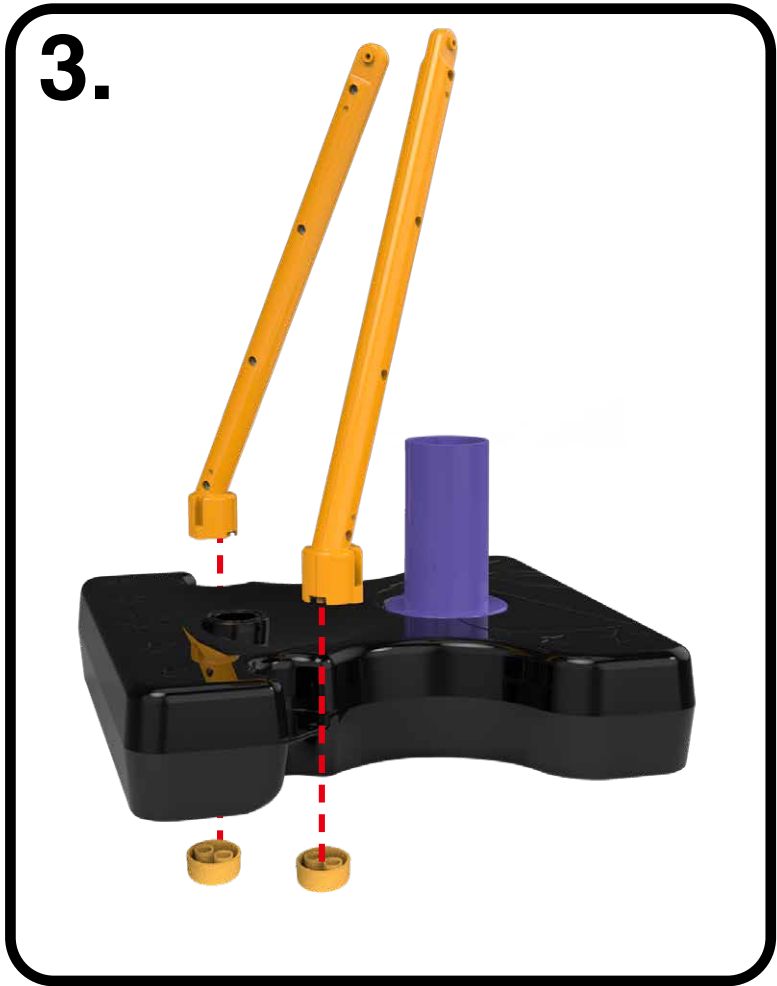




x 4

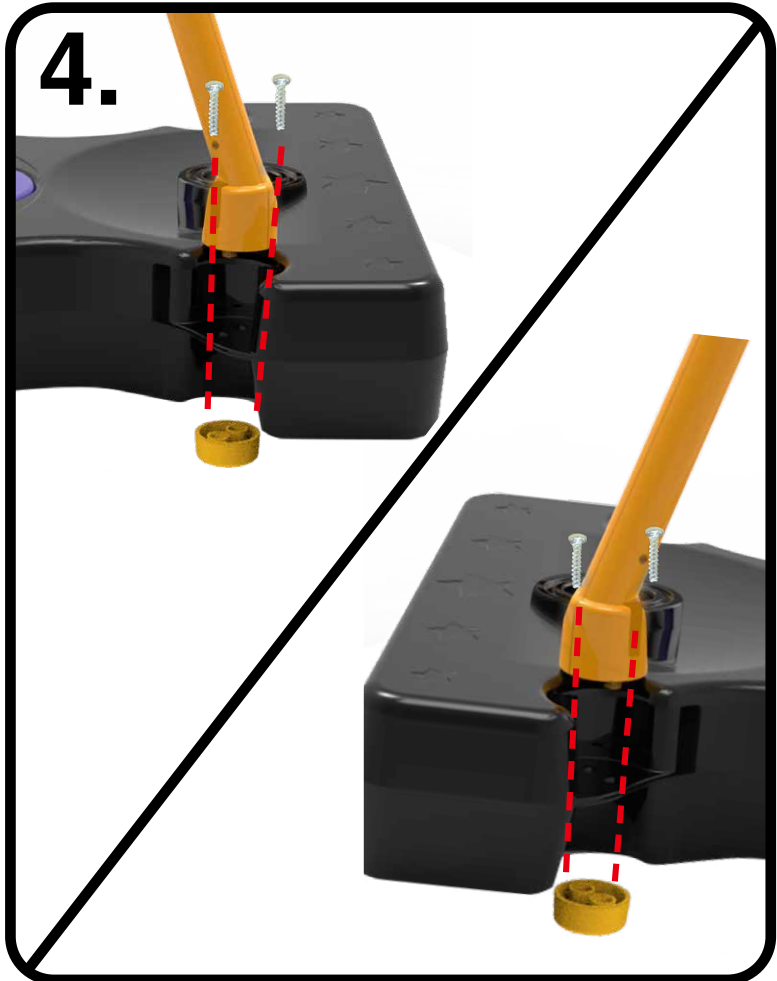

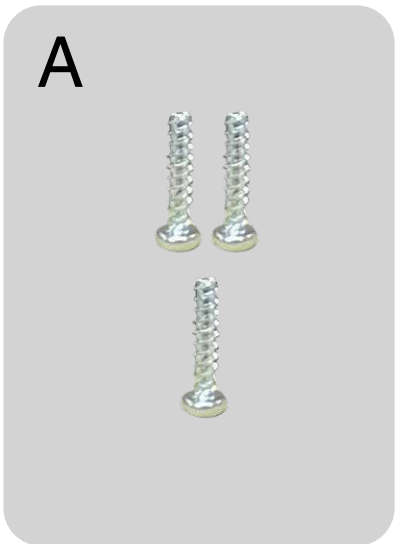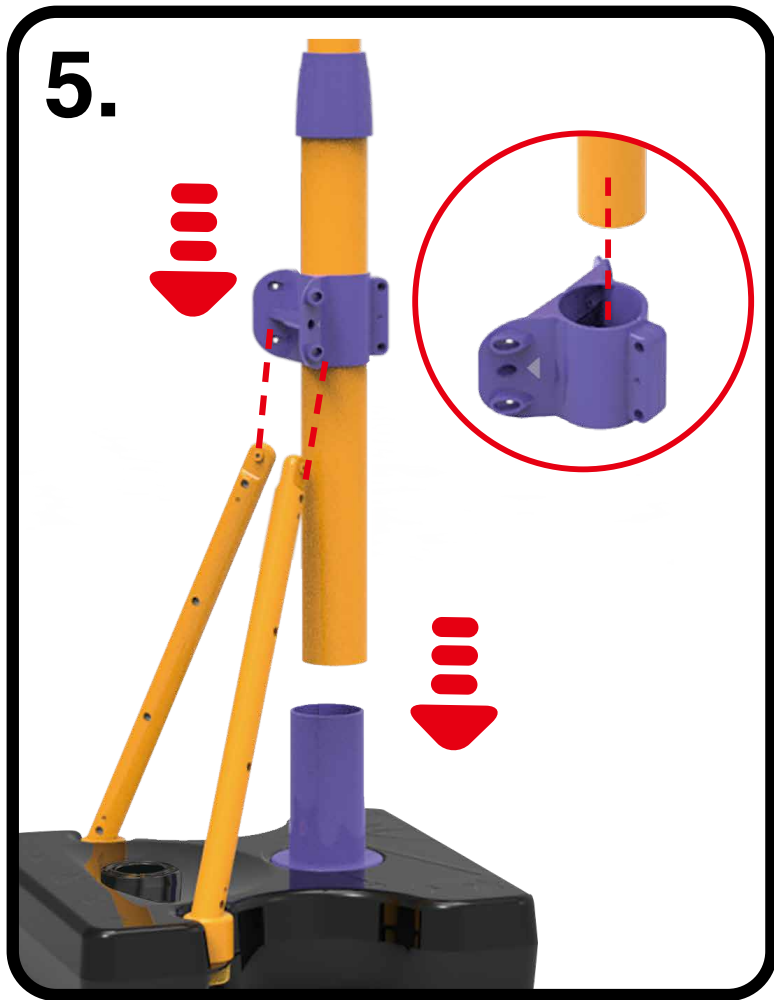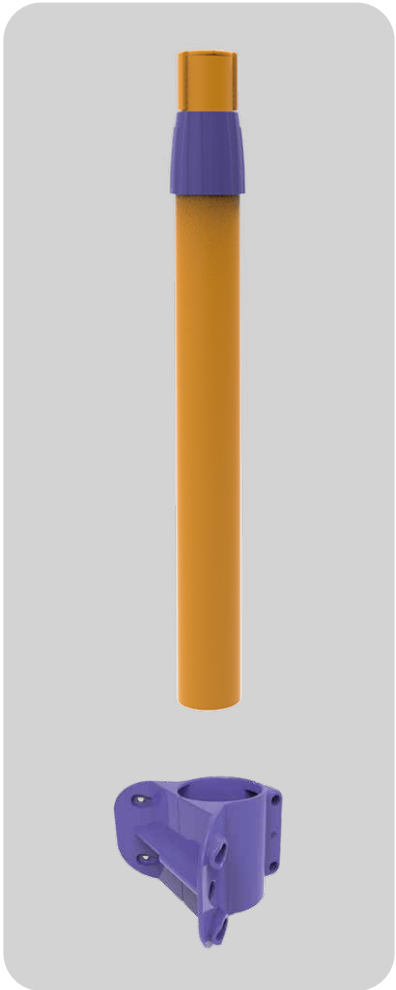

x 3

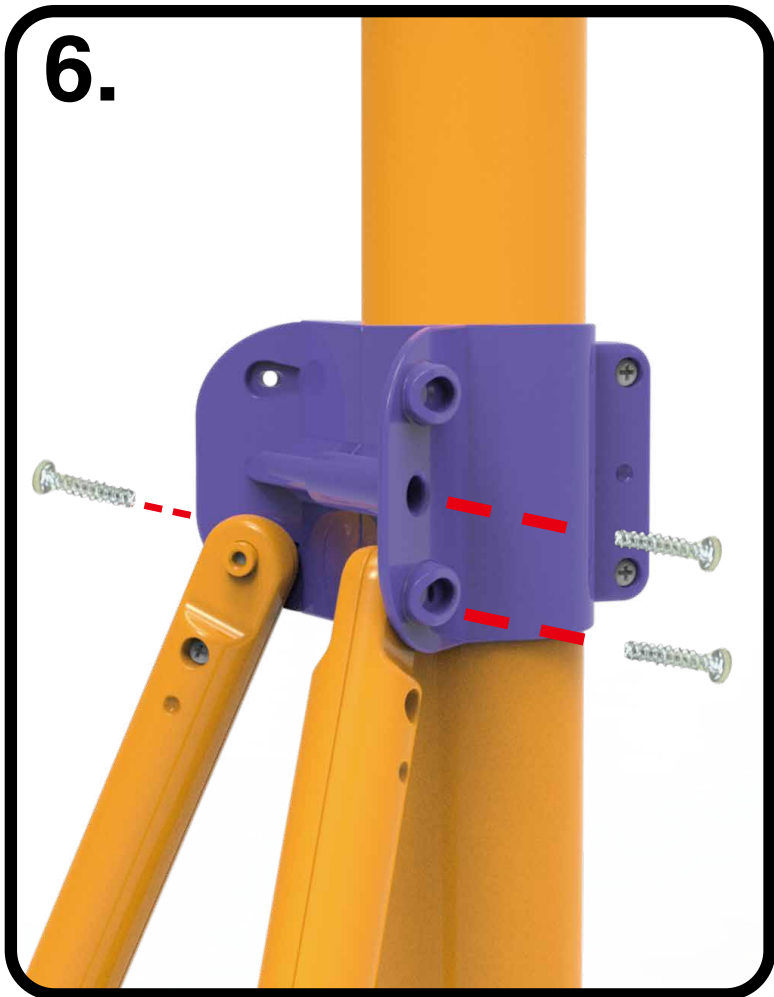

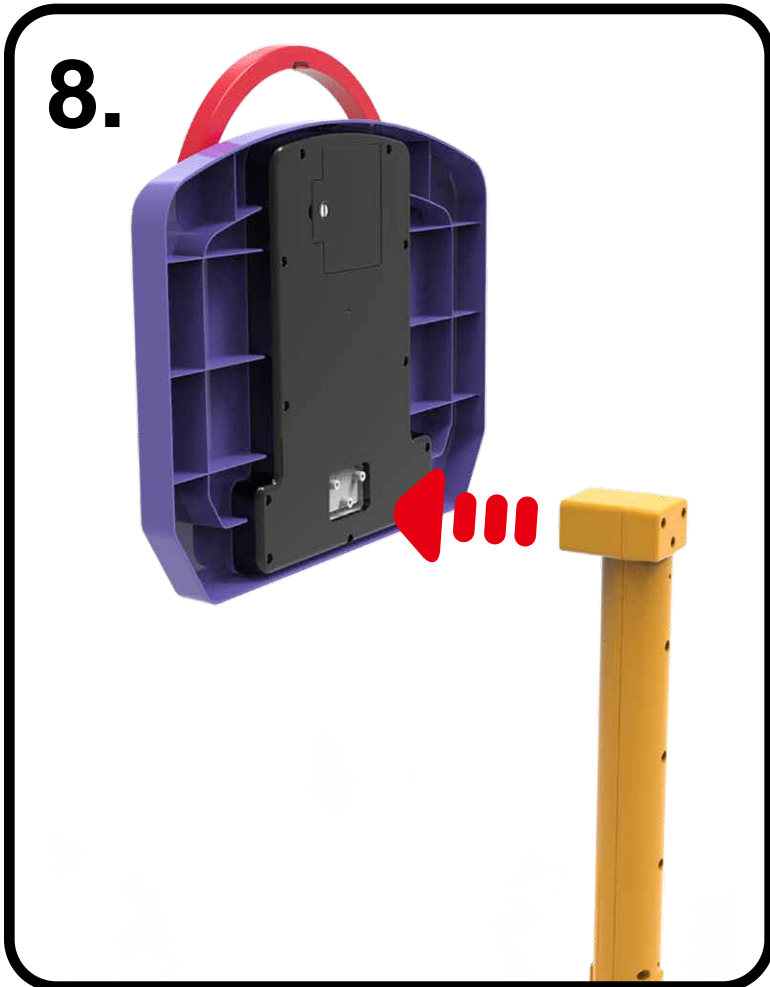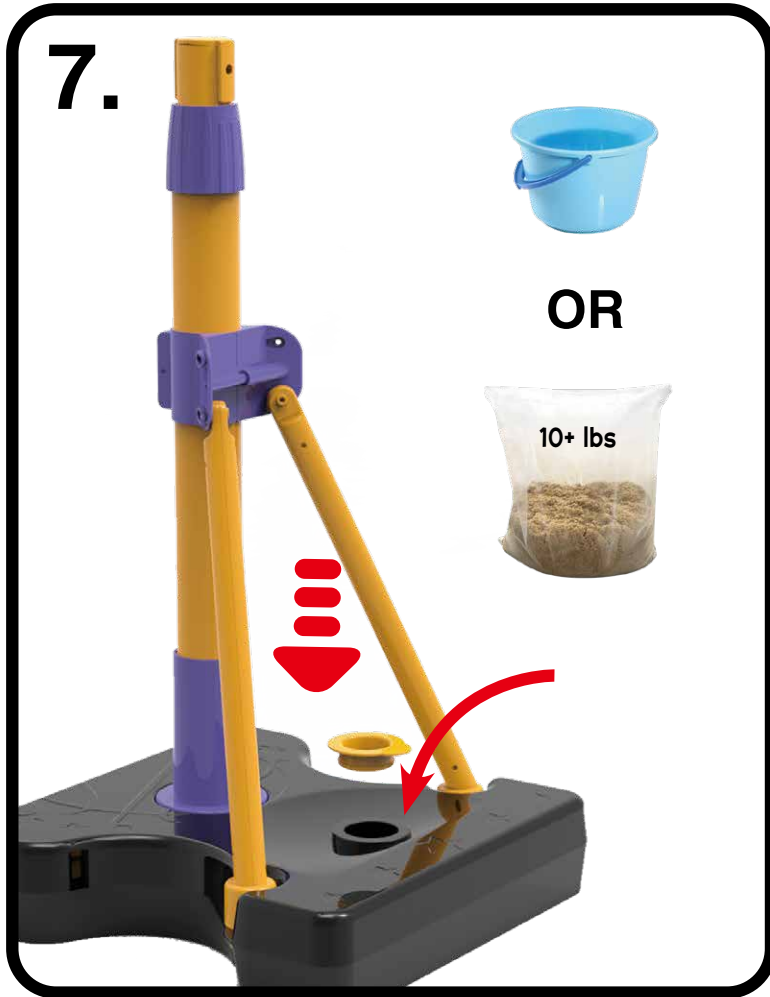


B









x 3



9.

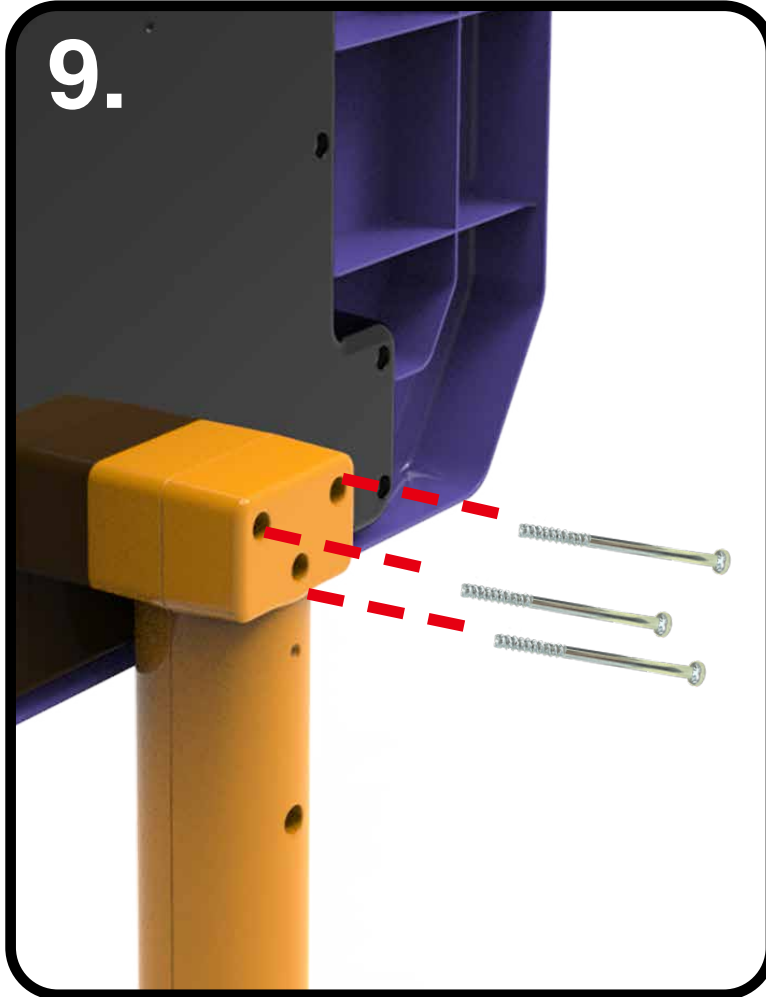

10.

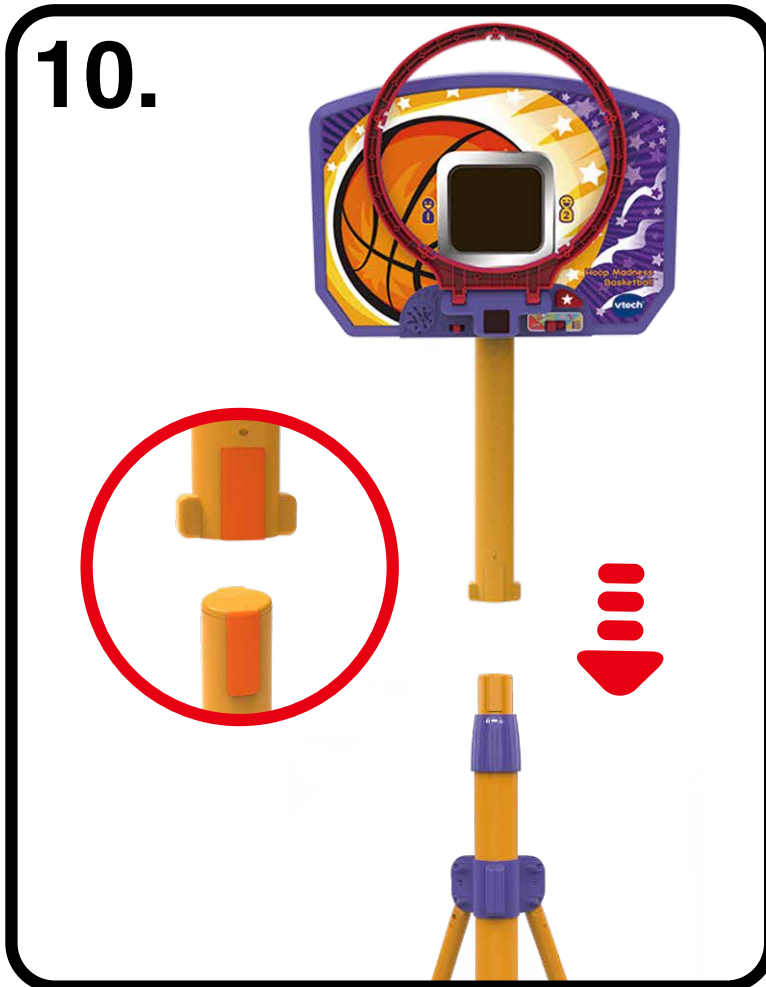

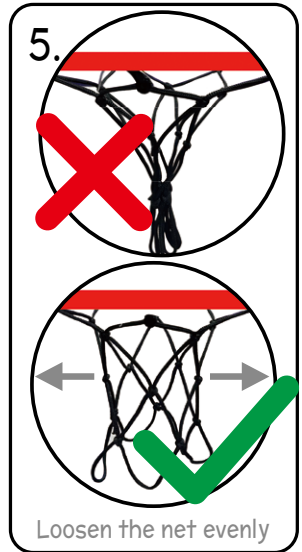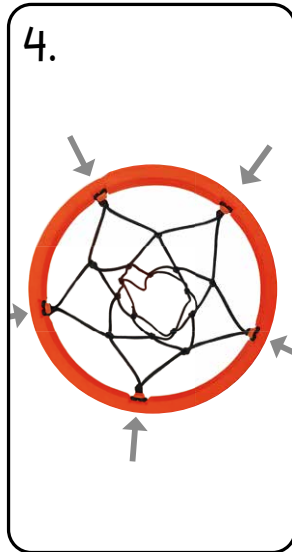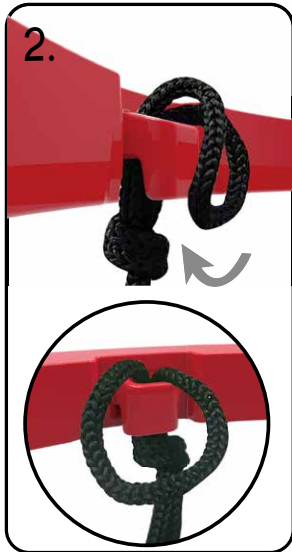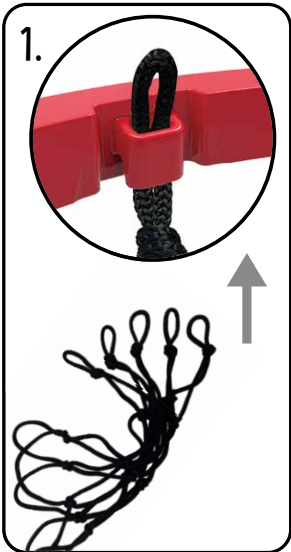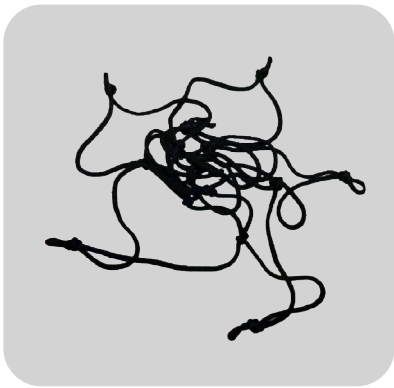

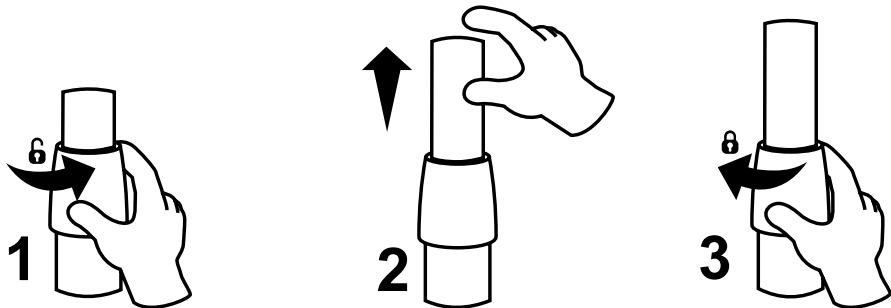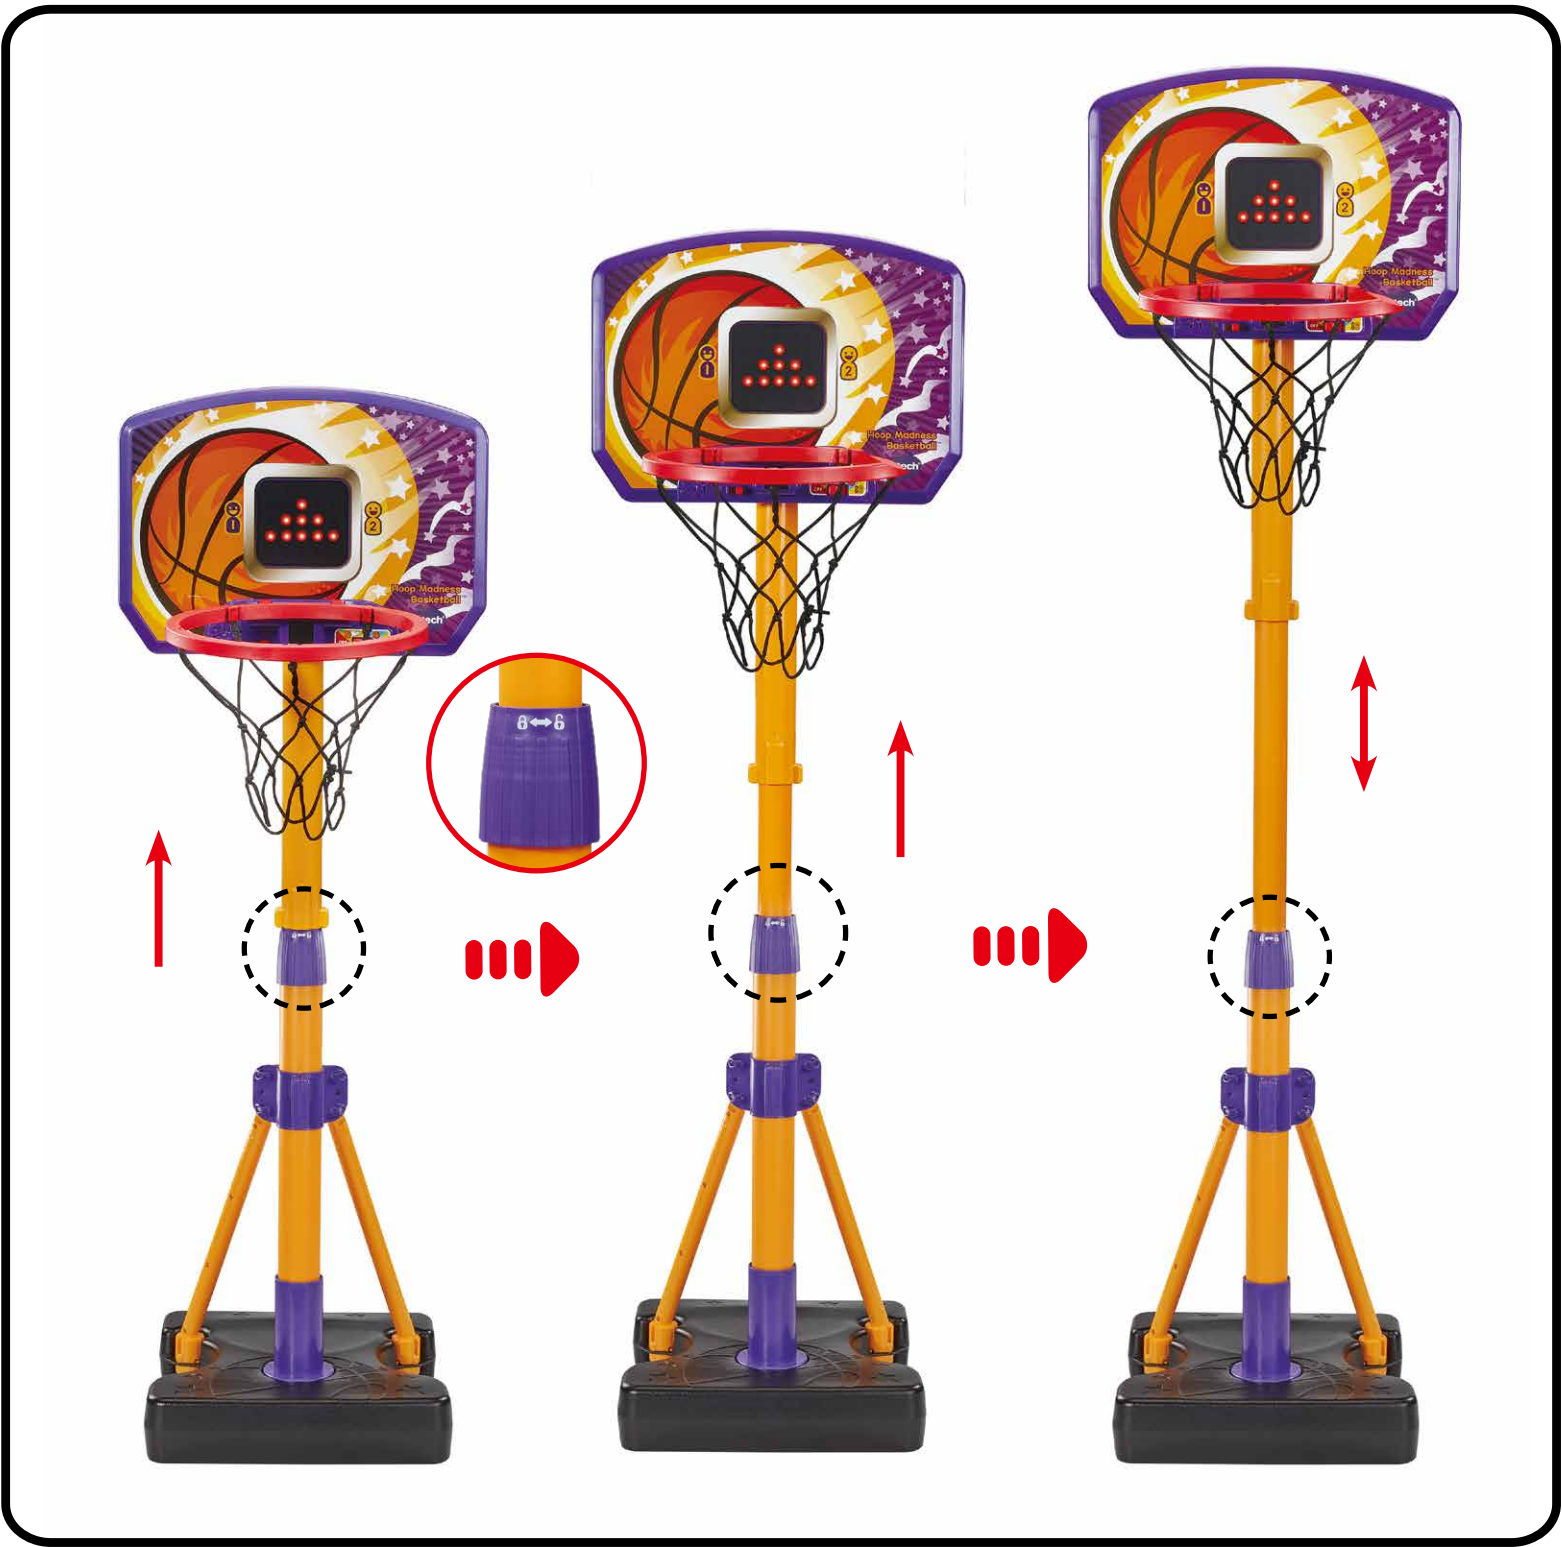

Note: Fold Up Hoop when not in use to save space.

PRODUCT FEATURES


1. On/Off/Mode Selector

Slide the **On/Off/Mode Selector** to choose an activity or turn the unit **Off**. Choose from three activities.



2. Mute/Volume Selector

To choose a volume, slide the **Mute/Volume Selector** to **Low** or **High**. To turn **Off** the sound, slide the switch left to **Mute**.

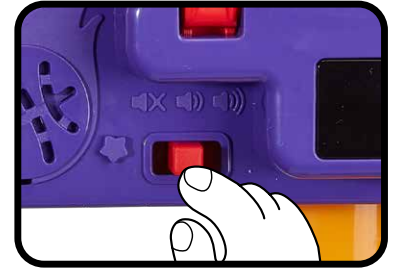

3. Select Button

Use the **Select Button** to choose:

- A theme for the **Match My Move** activity
- A level for the **Match & Toss** activity
- 1 or 2 players for the **Buzzer Beater Challenge**



4. Automatic Shut-Off

To preserve battery life, the **Hoop Madness Basketball™** set will automatically shut off after several minutes without input. The unit can be turned **On** again by sliding the **On/Off/Mode Selector**.

TO BEGIN PLAY

Slide the **On/Off Mode Selector** to the right and select a game to play.


ACTIVITIES

1. Match My Move


Move the **On/Off Mode Selector** to the .

Press the **Select Button** to choose a theme: Busy Bug, Creepy Critters, Alien Arcade or Free Play. Follow the instructions to play this “Simon Says” style game.

2. Match & Toss

Move the **Off/Mode Selector** to the . Press the **Select Button** to choose from 3 levels of play. Shoot when you see the requested shape, number or object on the screen. Game will automatically level up when you complete a challenge.

3. Buzzer Beater Challenge

Move the **On/Off/Mode Selector** to the . Press the **Select Button** to choose between 1 or 2 players. See how many baskets you can make in the time given! (60 seconds per player)

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5714
Product name: Hoop Madness Basketball™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

