



# Instruction Manual

## SPIN LEARNING WATCH



Marvel Spidey and his Amazing Friends

 
© MARVEL

All rights reserved.



# INTRODUCTION

Thank you for purchasing the **VTech® Spidey and His Amazing Friends Spin Learning Watch**. This full-function watch includes nine digital clock faces, time tools and four games. Hear Spin say fun phrases and listen as the narrator guides you through crime-fighting adventures.

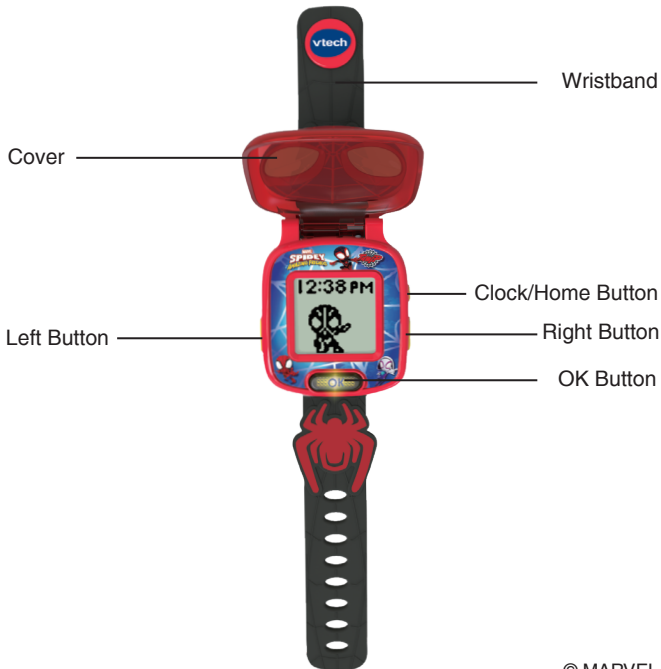

# INCLUDED IN THE PACKAGE

- One **Spin Learning Watch**
- 1 CR2450 battery
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

# PRODUCT SPECIFICATIONS

Battery	One CR2450 battery
Time Format	12h or 24h
Display	Digital
Optimum Operating Temperature	32°F - 104°F (0°C - 40°C)

## Important Note

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the cover closed when the watch is not in use.

## Note

- Ne pas mettre la montre sous l'eau.
- Ne pas immerger la montre et ne pas l'utiliser sous la douche et dans le bain.
- Garder le clapet fermé lorsque la montre n'est pas utilisée.

## WARNING

People with very sensitive skin may notice some irritation after wearing the **Spin Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed. Take the watch off if it's feeling uncomfortable, and keep wrist and band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

## PRÉCAUTIONS D'UTILISATION

 
 
Comme avec d'autres objets portés près du corps de manière prolongée, la montre interactive pourrait éventuellement provoquer une irritation. L'humidité, la transpiration, l'eau savonnée ou d'autres agents irritants peuvent s'incruster sous le bracelet et rester en contact avec la peau. En prévention, nous recommandons fortement aux enfants de ne pas porter la montre pendant la nuit, de l'enlever dès le moindre signe d'irritation, et de garder le bracelet sec et propre. Par ailleurs, vérifiez que le bracelet de votre enfant ne soit ni trop serré, ni trop lâche. Si vous observez des rougeurs, gonflements ou autre irritation, veuillez consulter un médecin avant de remettre la montre.

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

**NOTE:** For best performance, remove the factory-installed battery from the **VTech® Spidey and His Amazing Friends Spin Learning Watch** and use a new battery.

1. Make sure the watch cover is closed.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Use the screwdriver to push the metal piece according to the diagram. Remove the battery when one end of the battery pops up.
4. Follow the diagram inside the battery box to install one new 3V CR2450 battery and press it into the battery room.
5. Replace the battery cover and tighten the screw to secure.

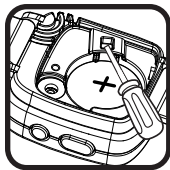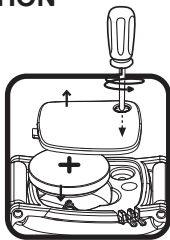

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## **WARNING!**

Contains coin battery.

A coin battery can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body.

Individual battery is hazardous. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## **ATTENTION:**

Contient une pile bouton au lithium.

Une pile bouton au lithium peut causer en moins de deux heures des brûlures chimiques internes graves pouvant conduire à la mort en cas d'ingestion ou d'introduction à l'intérieur d'une partie quelconque du corps.

Mettre immédiatement au rebut les piles ou accumulateurs usagés. Tenir les piles ou accumulateurs neufs et usagés hors de la portée des enfants. Si des piles ou accumulateurs ont pu être ingérés ou placés à l'intérieur d'une partie quelconque du corps, contactez immédiatement un centre anti poison.

## **IMPORTANT: BATTERY INFORMATION**

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove battery during long periods of non-use.
- Remove exhausted battery from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.
- Remove and immediately recycle or dispose of batteries from

equipment not used for an extended period of time according to local regulations.

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C (140°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable battery (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



## WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



## ATTENTION

 
- **DANGER D'INGESTION :** ce produit contient une pile bouton.
- L'ingestion de cette pile peut entraîner la mort ou des blessures graves.
- L'ingestion d'une pile bouton peut provoquer des brûlures chimiques internes en seulement **2 heures**.
- **GARDER** les piles neuves et usagées **HORS DE LA PORTÉE** des enfants.
- **Consulter immédiatement un médecin** si l'on soupçonne qu'une pile a été avalée ou insérée dans une partie du corps.






## EXIT TRY-ME MODE

When you use the watch for the first time, you must unlock it from Try-Me mode to play. To unlock from Try-Me mode, open the **Cover**, and press the **Left + Right + OK Buttons** together for approximately five seconds. You will then hear three beeping sounds to indicate you have exited Try-Me Mode and the watch will function as normal. Press any button to activate the watch and set the time. Press the **Left or Right Button** to select, then press the **OK Button** to confirm and move to the next option. A checkmark will be displayed when the setting is complete.

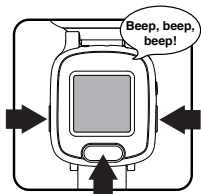

### Note:

- When the battery level is low , most functions on the watch may not be activated, except for the clock display. It is recommended to install a new battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

# PRODUCT FEATURES

## 1. Cover

Open the **Cover** to view the time. When the **Cover** is closed, tap the bottom of the **Cover** to activate character voices and sounds with a light effect.

## 2. Left/Right Buttons

Use the **Left** or **Right Button** to select an activity or option.

## 3. OK Button

Press the **OK Button** to confirm a selection and move to the next option in different activities.

## 4. Clock/Home Button






Press the **Clock/Home Button** to return to the clock from any other function or activity. When in Clock mode, press the **Clock/Home Button** to change to a new clock face.

## 5. Clock Display

When the **Clock/Home Button** is pressed, the time will be displayed. Press the **Left** or **Right Button** to display the **Home Menu** where other activities can be selected.

## 6. Home Menu

Press the **Left** or **Right Buttons** to display the **Home Menu**. There are five activities to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Button** to scroll through the menu options.
- Press the **OK Button** to enter the chosen activity.

## 7. Alarm Clock

- Press the **Left** or **Right Button** to select the time and choose between three alarm tones.
- Press the **OK Button** to confirm and move to the next setting.
- Press the **Clock/Home Button** to automatically save the current setting.



## 8. Stopwatch

- Press the **OK Button** to start the Stopwatch. Press again to stop.
- When the Stopwatch is stopped, you can press the **Left** or **Right Button** to reset.



## 9. Timer

- Press the **Left** or **Right Button** to change the time.
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current setting.
- Press the **OK Button** to confirm the Timer duration and the countdown will start immediately.
- While the Timer is running, press the **OK Button** to pause/resume or press the **Left** or **Right Button** to reset.



## 10. Settings

In the **Settings** menu, press the **Left** or **Right Button** to scroll through the various options:

## 10.1. Setting the Time

- Press the **Left** or **Right Button** to change the options (the AM/PM setting is only applicable in a 12-hour time format).
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current setting.



 
## 10.2. Clock Face

- Press the **Left** or **Right Button** to select from nine different clock faces.
- Press the **OK Button** or **Clock/Home Button** to confirm and save the setting.



## 10.3. Cuckoo Clock

- Press the **Left** or **Right Button** to turn the Cuckoo Clock on or off.
- Press the **OK Button** or **Clock/Home Button** to confirm and save the setting.
- Please note that when the Cuckoo Clock is activated, the watch will chime at the top of each hour between 7 AM and 7 PM, unless a game is currently in progress.

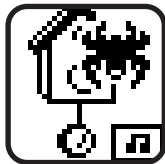


## 11. Automatic Shut-Off

To preserve battery life, the **Spin Learning Watch** will automatically shut off and switch to clock mode after approximately 30 seconds without input. The unit can be turned on again by pressing any button or opening the cover.

## Note:

The **Spin Learning Watch** will not automatically power off when the Stopwatch is running.

 The unit will automatically turn **Off** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.

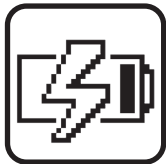


# ACTIVITIES

## 1. Games

In the Games menu, press the **Left** or **Right Button** to scroll through the different learning game options:

### 1.1 Saving Shapes

 Doc Ock has grabbed gifts of different shapes and put them in her hideout. Press the **Left** or **Right Button** to help Spin collect the stolen gifts. When Doc Ock appears, press the **OK Button** to help Spin use his Cloaking Power to turn himself invisible or Doc Ock will take away the gifts.

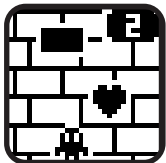


### 1.2 Butterfly Rescue

Sandman has captured butterflies and hidden them in holes under the ground. Help Spin save the butterflies by pressing the **Left** or **Right Button** to locate a butterfly and then press the **OK Button** to rescue it. Avoid selecting a hole with a flower.



### 1.3 Solve the Pattern

 Zola has taken all the party decorations into his hideout. Press the **Left** or **Right Button** to aim at the Hydra-bots, then press the **OK Button** to shock them with Arachno Sting. Then complete the patterns to get inside the hideout and retrieve everything for the party.

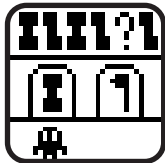

### 1.4. Electro Equation

Electro has stolen all the electricity from the city. Help Spin solve the equations and to find the electron absorber and take back control of the electricity. Press the **Left** or **Right Button** to make a selection and press the **Ok Button** to confirm.



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Interrupt the power supply by removing the battery.
2. Let the unit stand for a few minutes, then replace the battery.
3. The unit should now be ready to use again.
4. If the unit still does not work, install a new battery.

**IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5810  
Product Name: Spidey and His Amazing Friends  
Spin Learning Watch  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE  
FCC RULES. OPERATION IS SUBJECT TO THE  
FOLLOWING TWO CONDITIONS: (1) THIS DEVICE  
MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE  
RECEIVED, INCLUDING INTERFERENCE THAT MAY  
CAUSE UNDESIRED OPERATION.

CAN ICES(B)/NMB(B)



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

