

vtech®

Instruction Manual

 
Go!Go! Smart Wheels®

Fast & Friendly Garage™



INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Fast & Friendly Garage**. Repair, fuel up, wash and race all in one place. This multi-level garage is the best place in town to get your Speedy Race Car in tip-top shape!

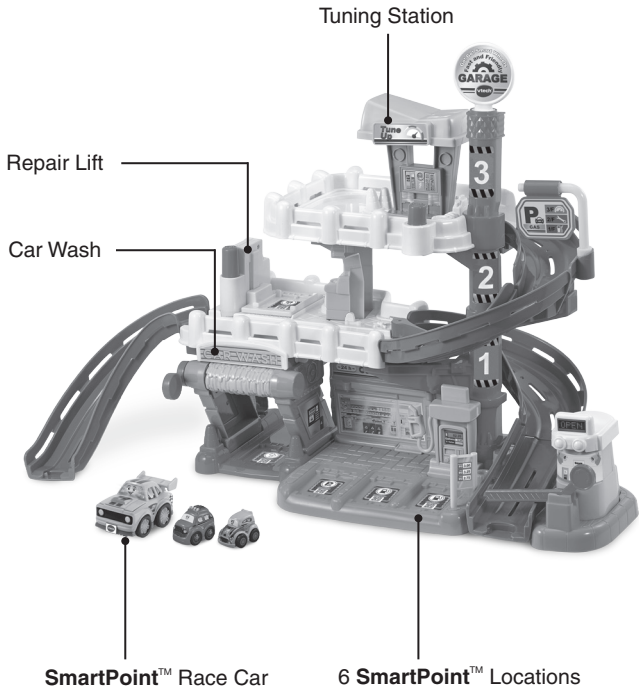

INCLUDED IN THE PACKAGE



One **SmartPoint™**
Speedy Race Car



One non-
electronic car



One non-
electronic car



One ground floor
base



One ground
floor support



 
One main
support



One **SmartPoint™**
car wash base



One car wash
roller

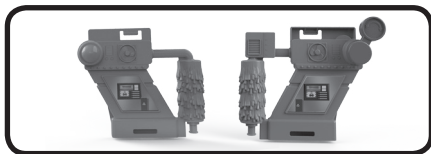

Two car wash supports



E

Track E



 
A

B

C

D

Four tracks (A, B, C, D)

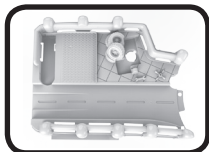


One second floor platform



One **SmartPoint™** repair lift



 One second floor support

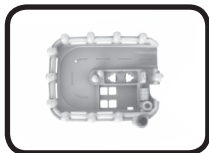

One third floor platform



One **SmartPoint™** tuning station plate



One tuning station roof



 
One tuning station support



One exit gate support



One exit gate roof

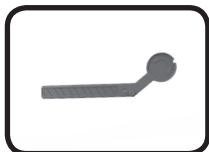

One exit gate



One road sign



One track splitter



One gas pump



 
One plate



One hanging sign plate



One hanging sign support

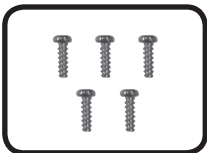

Five screws

- Sticker Sheet
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.

CAUTION

 
This package contains small screws. Adult assembly required.

For your child's safety, do not let your child play with the toy until it is fully assembled.

If there are no locks inside the package, disregard this message.

Removing the Packaging Locks:

- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

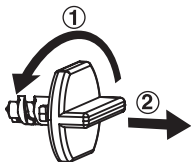

CAUTION:

This package contains small screws. Adult assembly required.
For your child's safety, do not let your child play with the toy until it is fully assembled.



 
ATTENTION!

Ce jouet contient des petites vis. Ce jouet doit être assemblé par un adulte. Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.

INSTRUCTIONS

Battery Removal And Installation

1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the bottom of the Speedy Race Car, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

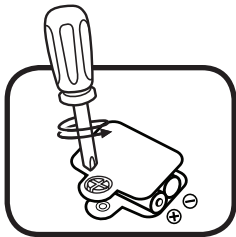

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

 
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
 
 
 
 
 
PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

LABEL APPLICATION

Please stick the labels to the play set as shown below:

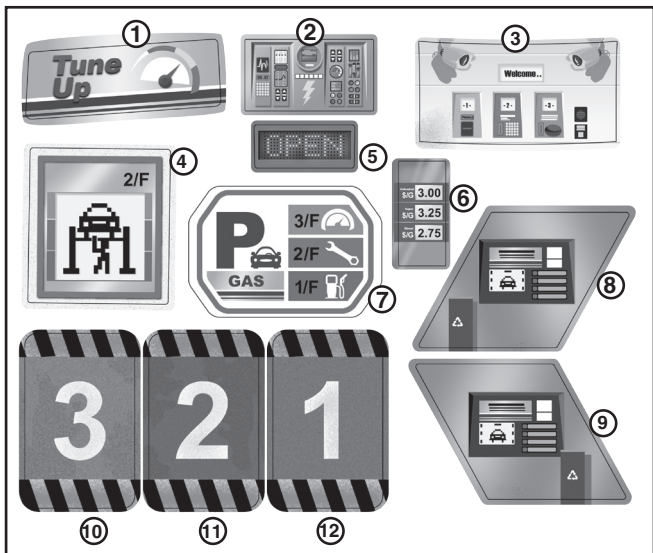

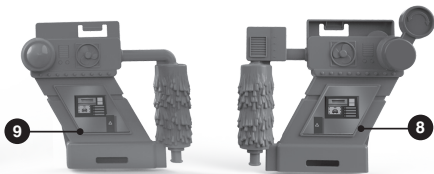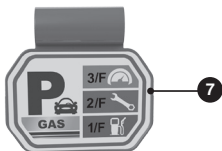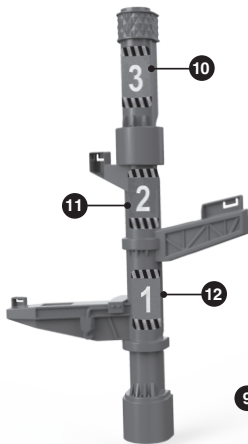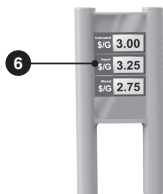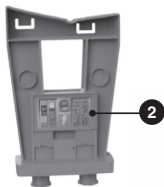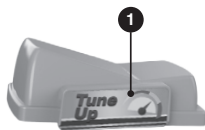

ASSEMBLY INSTRUCTIONS

 
 
With the **Go! Go! Smart Wheels Fast & Friendly Garage**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Assemble and attach the car wash and ground floor components following the steps below:

A. Insert the two Car Wash Supports into the Car Wash Base, as shown below. Make sure you hear a click sound to confirm the supports and base are firmly connected. Then insert the Car Wash Roller between the two supports as shown.




B. Attach the Ground Floor Support to the Ground Floor Base, as shown below. A click sound confirms the support and base are firmly connected. Attach the Main Support to the Ground Floor Base as shown. Tighten it with three screws to secure.

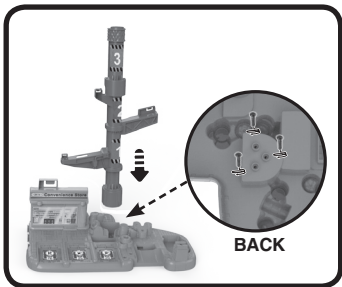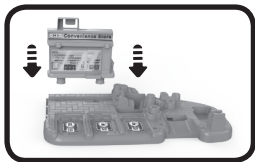


C. Attach the Car Wash to the Ground Floor Base, as shown

 below. Make sure you hear a click sound to confirm they are firmly connected.

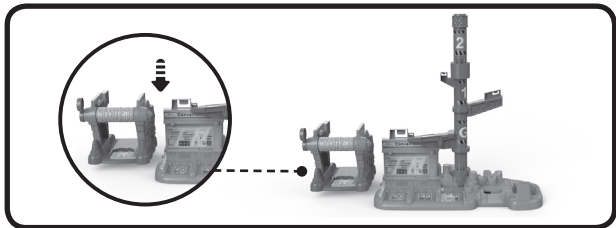


2. Assemble and attach the second floor components following the steps below:

 
A. Attach the Repair Lift and the Second Floor Support to the Second Floor Platform, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

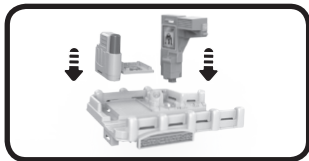

 B. Attach Track E to the Second Floor Platform, as shown below. Tighten it with two screws to secure.

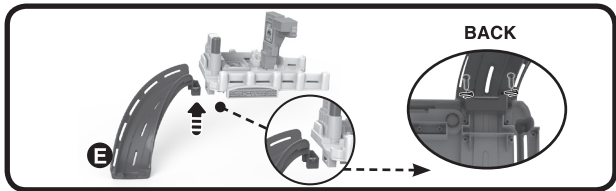


 C. Attach the Second Floor Platform to the Car Wash Supports, Ground Floor Support and Main Support, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

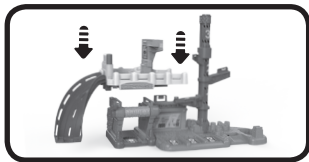


3. Assemble and attach the third floor components following the steps below:

 A. Attach the Tuning Station Roof to the Tuning Station Support, as shown below, then attach the Tuning Station Support and Tuning Station Plate to the Third Floor Platform as shown. Make sure you hear a click sound to confirm they are firmly connected.

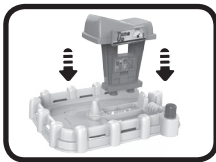


 B. Attach the Third Floor Platform to the Second Floor Support and Main Support, as shown below. Make sure you hear a click sound to confirm they are firmly connected.


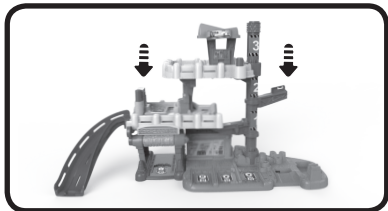


4. Assemble and attach the track components following the steps below:

 
A. Insert the Hanging Sign Support to the Hanging Sign Plate, and then insert it to the Sliding Track A, as shown below. Insert the Track Switch Gate into Track B as shown. Make sure you hear a click sound to confirm the Track Splitter and the Track B are firmly connected.

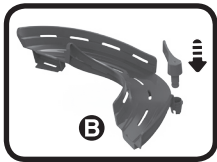

  
B. Connect Track C and Track D together, and then attach Track D to the Ground Floor Base, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

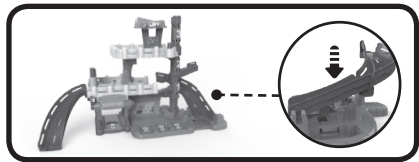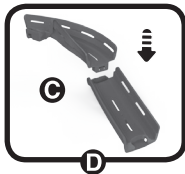

 C. Attach Track B to Track C, the Second Floor Platform and the Main Support, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

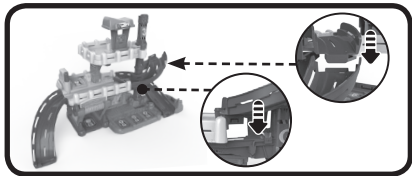


 D. Attach Track A to Track B, Main Support and the Third Floor Platform, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

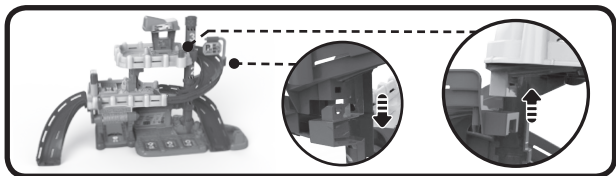


5. Assemble and attach the remaining components following the steps below:

 
A. Attach the Spinning Plate to the Main Support, as shown below. Attach the Exit Gate Roof to the Exit Gate Support, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

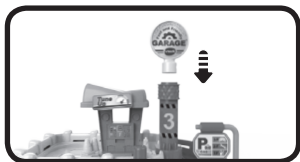

  B. Attach the Exit Gate Support, Exit Gate Handrail, Fuel Stop and Road Sign to the Ground Floor Base, as shown below. Make sure you hear a click sound to confirm they are firmly connected.

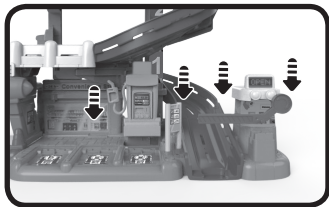

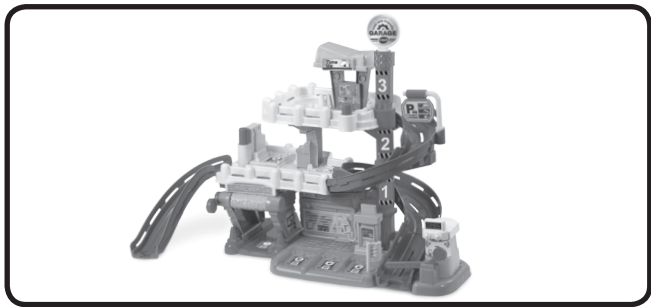


Once you've completed the above steps, you are ready to play! You can also connect the garage to other **Go! Go! Smart Wheels®** track sets (each sold separately).



PRODUCT FEATURES

1. On/Off Switch

 To turn the unit **On**, slide the **On/Off Switch** to the **On** () position.
To turn the unit **Off**, slide the **On/Off Switch** to the **Off** () position.

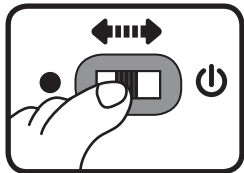

2. Automatic Shut-Off

 
To preserve battery life, the **Go! Go! Smart Wheels® Speedy Race Car** will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the light up button, pushing the car quickly, opening the bonnet or triggering a **SmartPoint™** location.

Note: This product is in Try-Me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit repeatedly powers down while playing, please install a new set of batteries.

ACTIVITIES

Speedy Race Car

1. Slide the **On/Off Switch** to turn the Speedy Race Car **On**. You will hear a song, fun phrases and sounds. The light will flash with the sounds.

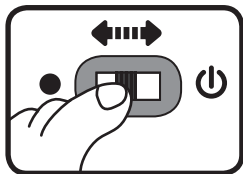

2. Press the **Light Up Button** to hear fun sounds, songs, phrases and melodies. The light will flash with the sounds.



3. Open the Speedy Race Car's **Hood** to hear fun sounds. The light will flash with the sounds.



4. Push the Speedy Race Car to hear fun sounds. If a melody is already playing, push the Speedy Race Car to add fun sounds on the top of the melody. The light will flash with the sounds.



5. For added fun, the Speedy Race Car interacts with the **Go! Go! Smart Wheels® Fast & Friendly Garage**. Simply put the Speedy Race Car on one of the track set's six **SmartPoint™** locations to hear fun sounds, music, phrases and see the light flash. The Speedy Race Car also interacts with the other **Go! Go! Smart Wheels®** track sets (each play set sold separately).



ACTIVITIES

Fast & Friendly Garage

1. Place the Speedy Race Car or any **SmartPoint™** vehicle (each sold separately) on any of the play set's six **SmartPoint™** locations to hear fun sounds, music and phrases.
2. Place the Speedy Race Car on the **Tuning Station**, and then press the button to get the Speedy Race Car race ready.
3. Place the Speedy Race Car on the **Repair Lift**, and then press the button to raise the lift to give the Speedy Race Car a tune-up.



- Place the Speedy Race Car on the **Car Wash**, and then push the handle to spin the roller to clean the Speedy Race Car.



MELODY LIST

- Mulberry Bush
- Little Bo Peep
- Hey Diddle Diddle
- Old MacDonald
- Polly Put the Kettle On
- Jack Be Nimble

SONG LIST

Song 1

I like to be at the front of the line
but when I'm with my friends, we all take turns.
When's it my turn?
When's it my turn?

Song 2

Here we go I'm in first
Here we go now we're tied.
Here we go back in first,
All out on a speedy fun ride.

Song 3

Go! Go! Smart Wheels!
I'm a Go! Go! Smart Wheels Race Car.
I'm built for the fastest run. (Go! Go!)
Shift the gear, full speed ahead.
Let's Go! Go! and see! (Go! Go!)

Song 4

Round and round the track we go
I am fast and the others slow.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5566
Product Name: Fast & Friendly Garage™
Responsible Party: VTech Electronics North America, L.L.C
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
D OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

